


## *Ghost Ring EX Rear Sight Instructions*


### **MOUNTING**

It is recommended to have a gunsmith mount the Rail as it requires drilling and tapping the receiver of your shotgun. See below for rail position on receiver and drilling hole locations.

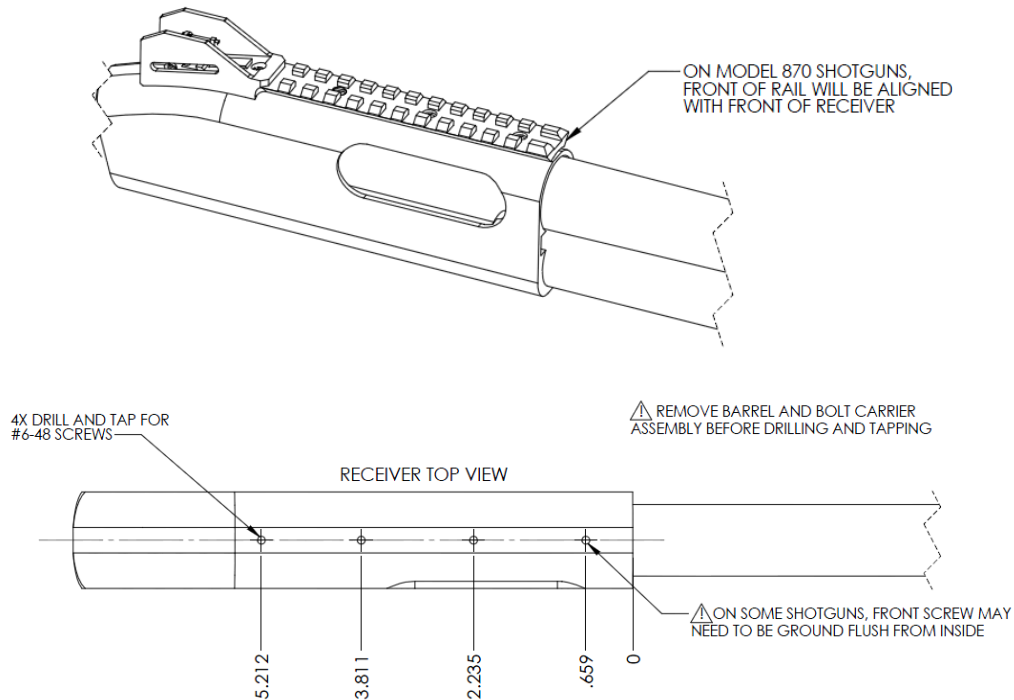

### **ADJUSTING THE SIGHT**

The Ghost Ring Sight is adjustable for elevation and windage. To adjust elevation, loosen the elevation screw on the side to allow the sight to slide up and down the dovetail track. To adjust for windage, loosen the set screw on the top which allow the Ghost Ring to move side to side. It is recommended to use a laser bore sight to quickly sight the shotgun in.

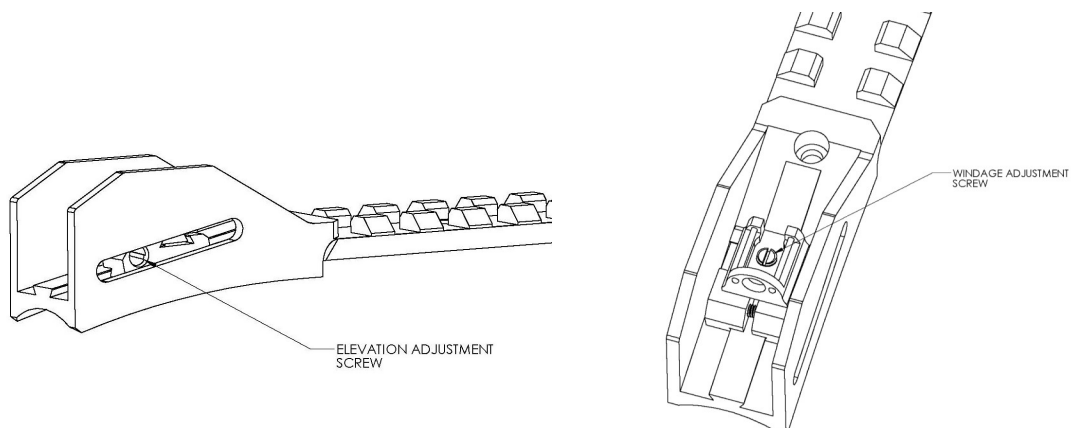

Questions? Contact us at [orders@spitfirearmory.com](mailto:orders@spitfirearmory.com) or call 612-559-1395